



PowerA™



FORTNITE

PowerA™
OPS V1
OVERPOWERED SERIES

**WIRELESS
CONTROLLER FOR
PC/CLOUD GAMING**

PCワイヤレスコントローラー
for PC & Cloud Gaming
— フォートナイト エディション

USER MANUAL | ユーザーマニュアル

WIRELESS CONTROLLER FOR PC/CLOUD GAMING

CONTROLLER BUTTON MAP



BOX CONTENTS

- Controller
- 10 ft. / 3 m USB-C* to USB-A Cable
- 2.4 GHz USB Wireless Adapter
- User Manual
- USB Charging Dock

CHARGING CONTROLLER VIA USB

For best results, fully charge controller prior to first use.

1. Connect the included USB-C cable to the USB-C port at the top of the controller, and connect the other end to any powered USB source.
2. When charging, the Battery Status LED will flash AMBER.
3. When fully charged the LED will be solid GREEN.
4. LED will flash RED when battery is low.

CHARGING CONTROLLER VIA CHARGING BASE

1. Connect the included USB-C cable to the USB-C port at the back of the charging dock, and connect the other end to any powered USB source.
2. Place the PowerA OPS v3 Pro Wireless Controller for PC & Cloud Gaming on the charging dock.
3. The LED lights on the front of the charging base will illuminate if placed correctly.
4. Flashing AMBER LEDs mean the controller is charging.
5. Solid GREEN LEDs mean the controller is fully charged.

WIRELESS MODE: 2.4 GHZ

1. Insert wireless adapter into open PC USB port.
2. Select "RF" on the mode switch on bottom of controller.
3. If controller is off, press the Home button (icon) to turn on (LED will illuminate WHITE).
4. Press and hold the SYNC button on top of the controller for 3 seconds to enter pairing mode (LED will flash WHITE rapidly).
5. Enter the Settings menu on your device and choose the PC Wireless controller. The LED will turn solid WHITE when connected.

NOTE: You can also insert the Wireless Adapter into the USB port of the Charging Base when the Charging Base is connected to PC via USB-C cable.

WIRELESS MODE: BLUETOOTH

1. Select "BT" on the mode switch on bottom of controller.
2. If controller is off, press the Home button to turn on (LED will illuminate BLUE).
3. Press and hold the SYNC button on top of the controller for 3 seconds to enter pairing mode (LED will flash BLUE rapidly).
4. Enter the Bluetooth settings on your device.
5. Select "PowerA OPS v3 Pro Wireless Controller for PC & Cloud Gaming". LED will turn solid BLUE when connected.


NOTE: A previously paired device will automatically pair to the controller when powered on.

**WIRED MODE USB**

1. Select "USB" on the mode switch on bottom of controller.
2. Using the included USB-C Cable, connect to the USB-C port at the top of the controller and connect the other end to an available USB port on the PC.
3. If controller is off, press the Home button to turn on (LED will illuminate GREEN).

SWITCHING MODES - XINPUT AND DIRECT INPUT (2.4 RF / USB WIRED MODE ONLY)

1. Press and hold the SELECT and START buttons simultaneously for 3 seconds.
2. LED indicator will flash 3 times to indicate MODE has been changed.
3. To change modes again, press and hold SELECT and START buttons again for 3 seconds until LED flashes 3 times.

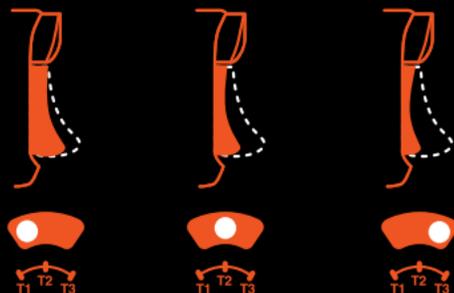TRIGGER LOCK ADJUSTMENT

QUICK-TWIST ADJUSTABLE ANALOG STICK

The analog stick height can be adjusted to one of three heights:



To change heights, twist the analog cap clockwise until you feel it catch the next height notch. If you want to go to the tallest height turn it a second time. To return to the standard height, turn the analog cap a third time and the analog stick will drop back down to the standard height.

POWERING OFF

Hold the Home button for 5 seconds to turn controller off.


ASSIGNING THE ADVANCED GAMING BUTTONS



A. Press the Program Button on the back of the controller for 3 seconds.



B. The Program Status LED will flash, signaling the controller is in assign mode.

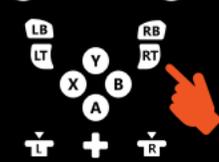

C. Press the button (A/B/X/Y/LT/RT/LB/RB/Left Stick Press/Right Stick Press/D-pad) you wish to assign to an Advanced Gaming Button.



D. Then press the Advanced Gaming Button (AGR1/AGR2/AGR3 or AGL1/AGL2/AGL3) that you wish to perform that function. The Program Status LED will stop flashing, signaling the Advanced Gaming Button has been set.

E. Repeat for the remaining Advanced Gaming Buttons.

NOTE: Advanced Gaming Button assignments will remain in memory after use.

RESETTING THE ADVANCED GAMING BUTTONS

1. Hold the Program Button down for 2-3 seconds. The Program Status LED will slowly flash, signaling the controller is in assign mode.
2. Press the previously assigned Advanced Gaming Button for 5 seconds, and the function will be cleared.

PROFILE SETTINGS

Custom user profiles can be set using the PowerA OPS v3 Pro Wireless Controller for PC & Cloud Gaming app on a PC. In the app you will be able to set and save up to 3 custom profiles; these profiles will then be loaded onto the controller. Each profile will be assigned a different color to notify you which one is selected. Each press of the profile button will swap to the next profile in order and then cycle back to the beginning: 1 → 2 → 3 → 1

The Program Status LED will quickly flash 3 times to signal a profile has been changed and then return to solid.

To clear the profiles or change the settings, please use the *PowerA OPS v3 Pro Wireless Controller for PC & Cloud Gaming app*.

TURBO SETTING

A. Press and hold one of the A, B, X, Y buttons that you wish to set to Turbo.



B. While holding down the desired button, press the Turbo button.



C. The Program Status LED will flash 3 times to indicate Turbo has been set.



D. Press the Turbo button again to turn Turbo off.

TROUBLESHOOTING

PROBLEM: My controller will not power on.
SOLUTION: Confirm the controller is fully charged. Plug in to recharge as needed.

PROBLEM: I don't see my PC controller listed in my device's settings.
SOLUTION: Press and hold the SYNC button on bottom of controller for 3 seconds to enter pairing mode (LED will flash rapidly).

PROBLEM: My wireless controller is not pairing.
SOLUTION 1: Confirm the battery is charged by plugging in USB-C cable.

SOLUTION 2: Confirm you are following the Wireless pairing process.

SOLUTION 3: Insert paper clip into the Reset Hole as marked above to reset controller to factory settings.

For latest FAQs, visit www.powera.com/support

TWO-YEAR LIMITED WARRANTY

For warranty details or support with your authentic PowerA accessories, please visit www.powera.com/support

WARRANTY AGAINST DEFECTS, AUSTRALIA & NEW ZEALAND CUSTOMERS

This product is provided with a 2-year warranty against defects in manufacturing or materials from the date of purchase. ACCO Brands will either repair or replace a faulty or defective product subject to the conditions of this warranty. Claims under this warranty must be made to the place of purchase within the warranty period with proof of purchase by the original purchaser only. Expenses associated with a warranty claim are the responsibility of the consumer. Conditions of this warranty are on our website: PowerA.com/warranty-ANZ

This warranty is provided in addition to other rights or remedies available to you under the law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

DISTRIBUTOR CONTACT DETAILS

AUSTRALIAN CUSTOMERS: ACCO Brands Australia Pty Ltd
Locked Bag 50, Blacktown BC, NSW 2148
Phone: 1300 278 546 | Email: consumer.support@powera.com

NEW ZEALAND CUSTOMERS: ACCO Brands New Zealand Limited
PO Box 11-677, Ellerslie, Auckland 1542
Phone: 0800 800 526 | Email: consumer.support@powera.com

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-003(B)/NMB-003(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

RF EXPOSURE STATEMENT

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

REGIONAL COMPLIANCE SYMBOLS

More information available via web-search of each symbol name.



Waste Electrical and Electronic Equipment (**WEEE**): Electrical and electronic devices and batteries contain materials and substances that can have damaging effects on human health and the environment. This symbol indicates that this device and the battery must not be treated as household waste and must be collected separately. Dispose of the device via a collection point for the recycling of waste electrical and electronic equipment within the EU, UK and in other European countries that operate separate collection systems for waste electrical and electronic equipment and batteries. By disposing of the device and the battery in the proper manner, you help to avoid possible hazards for the environment and public health that could otherwise be caused by improper treatment of waste equipment. The recycling of materials contributes to the conservation of natural resources.



Conformit Europeene aka European Conformity (**CE**): A declaration from the manufacturer that the product meets applicable European Directives and Regulations for health, safety, and environmental protection.



UK Conformity Assessment (**UKCA**): A declaration from the manufacturer that the product meets applicable UK Regulations for health, safety, and environmental protection.



The **RCM** (Regulatory Compliance Mark) indicates that the product complies with the relevant Australian and New Zealand electrical safety, electromagnetic compatibility (EMC) and related requirements.

EU/UK DECLARATION OF CONFORMITY

Hereby, ACCO Brands USA LLC declares the wireless controller is in compliance with Directive 2014/53/EU and UK Radio Equipment Regulation 2017, as well as other essential requirements and relevant provisions of EU directives and UK legislation. The full text of the declaration of conformity is available at the following internet address: PowerA.com/compliance

WARNING: READ BEFORE PLAYING

A very small percentage of individuals may experience epileptic seizures when exposed to certain light patterns or flashing lights. Exposure to certain patterns or while playing video games, may induce an epileptic seizure in these individuals. Certain conditions may induce previously undetected epileptic symptoms even in persons who have no history for prior seizures of epilepsy. If you, or anyone in your family, have an epileptic condition, consult your physician prior to playing. If you experience any of the following symptoms while playing a video game – dizziness, altered vision, eye or muscle twitches, loss of awareness, disorientation, any involuntary movement, or convulsions – IMMEDIATELY discontinue use and consult with your physician before resuming play.

MOTION WARNING

Playing video games may cause muscle, joint, skin, or eye discomfort. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

- Avoid excessive play. Take a 10- to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms, or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning, or stiffness, stop and rest for several hours before playing again.

- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

BATTERY WARNING

- Do not attempt to repair the Li-ion battery yourself—you may damage the battery, which could cause overheating, fire, and injury.
- The Li-ion battery in your device should be serviced or recycled by PowerA or an authorized provider and must be recycled or disposed of separately from household waste.
- Dispose of batteries according to your local environmental laws and guidelines.
- Do not use or leave the product containing rechargeable batteries exposed to very high or very low temperature (e.g. at strong direct sunlight or in a vehicle in extremely hot or extremely cold weather), or in an environment with extremely low air pressure can result in an explosion, fire, or the leakage of flammable liquid or gas.
- Do not use a device containing rechargeable batteries in an environment with high levels of static electricity. Excessive static electricity can impair the batteries' internal safety measures, increasing the risk of overheating or fire.
- If liquid leaking from a battery pack comes into contact with your eyes, DO NOT RUB EYES! Immediately flush eyes thoroughly with clean running water and seek medical attention to prevent injury to eyes.
- If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging or storage, immediately remove it from any charging device and place it in a sealed fireproof container such as a metal box, or in a safe location away from people and flammable items.
- Discarded batteries may cause fire. Do not heat the controller or battery, or place either in or near fire.

MANUFACTURED FOR

ACCO Brands USA LLC, 4 Corporate Drive, Lake Zurich, IL 60047

ACCOBRANDS.COM | POWERA.COM | MADE IN CHINA

ADDITIONAL LEGAL

© 2025 ACCO Brands. All Rights Reserved. PowerA and the PowerA Logo are trademarks of ACCO Brands.

© 2025 Epic Games, Inc. All rights reserved. Fortnite and its logo are trademarks of Epic Games, Inc. in the USA (Reg. U.S. Pat. & Tm. Off.) and elsewhere.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ACCO Brands is under license. Other trademarks and trade names are those of their respective owners.

USB-C® is a registered trademark of USB Implementers Forum.

PATENT PENDING

[HTTP://WWW.ACCOBRANDS.COM/PATENTS/](http://www.accobrands.com/patents/)

WIRELESS SPECIFICATIONS FOR EU & UK COMPLIANCE

Frequency Range: 2.4 – 2.4835 GHz


Max E.I.R.P.: <10 dBm

WIRELESS ADAPTOR COMPLIANCE IDENTIFICATION

Model: PCGPWLTX

FCC ID: YFK-PCGPWLDB

IC: 9246A-PCGPWLDB

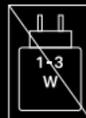

Complies with
IMDA Standards
DB105685

PCゲーミング専用ワイヤレスコントローラー

ボタン配置



パッケージ内容

- ・ コントローラー本体
- ・ USB-C to USB-Aケーブル(3m)
- ・ 2.4GHz USB ワイヤレスレシーバー
- ・ ユーザーマニュアル
- ・ USB充電ングドック

USB経由での充電

ご使用前にコントローラーを充電してください。

1. 付属のUSB-CケーブルのUSB-C側をコントローラー上部のUSB-C端子に接続し、もう一方の端子を任意のUSB-A端子に接続します。
2. 充電中は充電ランプがオレンジ色に点滅します。
3. 充電が完了すると充電ランプが緑色に点灯します。
4. バッテリーの充電残量が少なくなると充電ランプが赤色に点滅します。

ワイヤレス：RFモード
(USBレシーバーを使用)

1. USBレシーバーをPCのUSB-A端子に挿入します。
2. コントローラー背面の接続モード切替スイッチで「RF」を選択します。
3. コントローラーの電源がオフの場合は、ホームボタン(🏠)を押して電源をオンにします。電源がオンになるとステータスランプが白色に点灯します。
4. コントローラー上部のシンクロボタンを3秒間長押しすると、ステータスランプが白色で点滅し、ペアリングモードであることを示します。
5. デバイスの設定で、USBレシーバーを有効にしてください。(詳細は接続するデバイスのユーザーマニュアルをご確認ください。)接続されるとステータスランプが白色に点灯します。



注：充電ングベースがUSB-Cケーブル経由でPCに接続されている場合、ワイヤレスレシーバーを充電ングベースに格納することができます。

ワイヤレス：Bluetoothモード

1. コントローラー背面の接続モード切替スイッチで「BT」を選択します。
2. <ペアリング済みの場合>
コントローラーの電源がオフの場合、ホームボタン(🏠)を押して電源をオンにします。電源がオンになると、ステータスランプが青色に点灯します。
3. コントローラー上部のシンクロボタンを3秒間長押しすると、ステータスランプが青色で点滅し、ペアリングモードであることを示します。
4. デバイス上でBluetoothの設定に入ります。
5. 「PowerA OPSv1 Wireless Controller for PC&Cloud Gaming」を選択します。Bluetooth接続が完了するとステータスランプが青色に点灯します。




注：以前にペアリングしたデバイスは、コントローラーの電源がオンになると自動的にコントローラーとペアリングされます。詳細は接続するデバイスのユーザーマニュアルをご確認ください。

有線：USBモード

1. コントローラー背面の接続モード切替スイッチで「USB」を選択します。
2. 付属のUSB-CケーブルのUSB-C側をコントローラー上部のUSB-C端子に接続し、もう一方の端子をPCのUSB-A端子に接続します。
3. ステータスランプが緑色に点灯します。



トリガーロックの調節

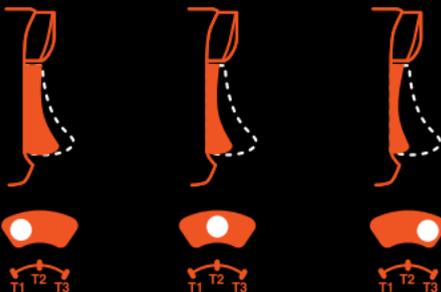Xinput/DirectInput モード切り替え
(ワイヤレス：RFモード/USBモード時のみ)

1. SELECTボタンとSTARTボタンを同時に3秒間長押しします。
2. ステータスランプが3回点滅し、Xinput/DirectInputのいずれかに切り変わったことを示します。
3. もう一方のモードに切り替える場合は、SELECTボタンとSTARTボタンを同時に3秒間長押しします。

アナログスティック用キャップ

付属品としてアナログスティックキャップ(2個)が同梱されています。

操作感やグリップ感を調整したい場合は、付属品のアナログスティック用キャップ(2個)をご使用ください。

電源オフ

(ワイヤレス：RFモード/BTモードのみ)

- ・ホームボタンを5秒間長押しすると、コントローラーの電源がオフになります。
- ・1時間以上操作が行われないと自動的に電源がオフになります。


アドバンスドゲーミングボタンの割り当て



- A. コントローラーの背面にあるプログラムボタンを3秒間長押しします。



- B. ステータスランプがゆっくりと点滅し、コントローラーがプログラムモードであることを示します。

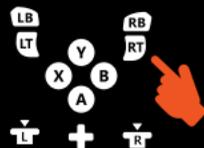

- C. アドバンスドゲーミングボタンに割り当てるボタン(A/B/X/Y/LB/RB/LT/RT/左アナログスティックボタン/右アナログスティックボタン/十字ボタン)のいずれかを押しします。ステータスランプがすばやく点滅します。



- D. 機能を実行したいアドバンスドゲーミングボタン(AGR1/AGR2/AGL1/AGL2のいずれか)を押しします。ステータスランプの点滅が止まり、アドバンスドゲーミングボタンへの割り当てが完了したことを示します。

- E. 残りのアドバンスドゲーミングボタンも同様に設定します。

注：アドバンスドゲーミングボタンの割り当ては、接続が解除されてもメモリに保存されています。

アドバンスドゲーミングボタンのリセット

1. プログラムボタンを3秒間長押しします。
コントローラーがプログラムモードになると、ステータスランプがゆっくり点滅し始めます。
2. リセットしたいアドバンスドゲーミングボタン(AGR1/AGR2/AGL1/AGL2のいずれか)を5秒以上長押しします。

プロフィールの設定

ユーザーはPowerA OPSv1 ワイヤレスコントローラーの設定のカスタマイズを保存することができます。アプリケーション上で最大3つのカスタマイズ設定を保存することができ、コントローラーにロードされます。それぞれの設定は異なる色で使用中のコントローラーの設定を確認することができます。プロフィールボタンを押すたびに設定を切り替えることができます。

設定1 → 設定2 → 設定3 → 設定1

LEDライトが3回素早く点滅しプロフィールの設定が変わったことを示し、点灯します。
プロフィールの設定の確認を行うにはPowerA PC Appをご確認ください。

連射機能



- A. 連射機能を設定したいA,B,X,Yボタンのいずれかを長押しします。
- B. 設定したいボタンを押しながら、TURBOボタンを押します。
- C. ステータスランプが3回点滅し、連射機能が設定されたことを示します。
- D. A～Cの手順を再度繰り返すと連射機能がオフになります。

トラブルシューティング

- Q1 コントローラーの電源が入りません。**
- A1 コントローラーが充電されていることを確認してください。充電残量が少ない場合は、コントローラーを充電してください。
- Q2 デバイスの設定にコントローラーが表示されません。**
- A2 「ワイヤレス:Bluetoothモード」の手順を再度試してみてください。
- Q3 ワイヤレスコントローラーがペアリングされません。**
- A3-1 コントローラーが充電されていることを確認してください。充電残量が少ない場合は、コントローラーを充電してください。
- A3-2 「ワイヤレス:RFモード」または「ワイヤレス:Bluetoothモード」の手順を再度試してみてください。

最新のFAQとサポートについては、[Powera.com/ja-jp/contact-us/](https://www.powera.com/ja-jp/contact-us/)をご確認ください。

バッテリーに関する警告

- お客様ご自身によるバッテリーの修理、分解、改造は絶対に行わないでください。バッテリーが損傷し、過熱、火災、けがの原因となることがあります。
- バッテリーが内蔵されているため、コントローラーを処分する際は、お住いの地域のルールに従ってください。不明な場合はお住まいの市町村、自治体へお問い合わせください。
- バッテリーを搭載した機器は、高温環境下（直射日光の当たる場所や炎天下の車内など）で使用したり放置したりしないでください。高温になるとバッテリーが過熱または発火する可能性があります。また、バッテリーの性能や寿命に悪影響を及ぼすことがあります。
- バッテリーを搭載した機器は、静電気の多い環境で使用しないでください。過度の静電気はバッテリーの内部安全対策を損ない、過熱や火災の危険性を高めることがあります。
- バッテリーから漏れた液体が目に入った場合は、目をこすらないでください。目を傷つけないように、すぐにきれいな流水で十分に洗い流し、医師の診察を受けてください。
- 使用中、充電中、保管中にバッテリーが異臭を発したり、発熱したりするなど、何らかの異常が見られたら、ただちに充電機器から取り外し、金属性の箱など密閉された耐火容器に入れるか、人や燃えやすいものから離して安全な場所に置いてください。
- コントローラーやバッテリーを加熱したり、火の中に入れてたり、火に近づけたりしないでください。

国内正規品限定2年保証

保証、サポートについては、Powera.com/ja-jp/contact-us/をご確認ください。

※商品に同梱されている保証書をご確認ください。

保証、サポートについては、Powera.com/ja-jp/contact-us/をご確認ください。

警告

健康上の安全のために、ご使用前によくお読みいただき、その内容を必ずお守りください。

※小さなお子様をご使用になる場合は、保護者の方がよくお読みいただいたうえで、お子様に付き添ってご使用ください。

- 強い光や点滅の刺激を受けたり、テレビの画面などを見たりしているとき、ごくまれに一時的に筋肉のけいれんや意識の喪失、めまい、視覚変化などを経験する人がいます。こうした症状を経験した人は、使用する前に必ず医師と相談してください。また、使用中にこのような症状が起きた場合には、直ちに使用を中止し、医師の診察を受けてください。
- 長時間連続して使用しない。目安として、1時間ごとに10～15分休憩してください。
- 目や手・腕・足・顔など身体の一部に痛みや疲労感、不快感があるときは、すぐに使用を中止する。これらの症状が続く場合は、医師の診察を受けてください。

© 2024 ACCO Brands. PowerAおよびPowerAロゴはACCO Brandsの登録商標または商標です。Bluetooth® ワードマークおよびロゴは登録商標であり、Bluetooth SIG, Inc. が所有権を有します。PowerAは使用許諾の下でこれらのマークおよびロゴを使用しています。その他の商標および登録商標は、それぞれの所有者の商標および登録商標です。

保証規定

商品に付属している保証書の内容をご確認の上、大切に保管してください。

お買い上げ時のレシートや領収書等がない場合は無効となりますのでご注意ください。

保証期間中に正常な使用状態で万一故障した場合には、保証規定事項に基づき、無償修理または交換いたしますのでお買い求めの販売店、または当社へお申し出ください。

保証期間内でも次のような場合にはサポートを提供できない場合がございます。


- 使用上の誤り、または改造や不当な修理による故障または損傷
- お買い上げの後の落下、引越し、輸送等による故障または損傷
- 火災、地震、水害、落雷その他天災地変ならびに公害や異常電圧、その他外部要因による故障または損傷
- 過酷な条件のもとで使用されて生じた故障または損傷
- 保証書の提示のない場合
- お買い上げ年月日、お客様名、販売店名の記入のない場合、あるいは字句を書き換えられた場合

保証書は日本国内においてのみ有効です。保証書は再発行いたしませんので紛失しないように大切に保管してください。

保証書は明示した期間、条件のもとにおいて無償対応をお約束するものです。したがって、保証書によってお客様の法律上の権利を制限するものではありませんので、保証期間経過後の修理等についてご不明な場合はお買い上げの販売店または当社へお問い合わせください。

アコ・ブランドズ・ジャパン株式会社
www.accobrand.co.jp
e-mail: jp.service@acco.com

国内正規品
2年保証

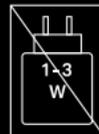

Complies with
IMDA Standards
DB105685